

BlitzForce™

XXL-B Storage Bracket


INSTRUCTION FOR INSTALLATION



The Portable Monitor Storage Bracket is designed only to store the Portable Monitor. Attempting to flow from the storage bracket can cause the monitor to become dislodged from the bracket and out of control, causing severe injury or death. Always properly deploy the monitor before flowing.



To reduce the risk of equipment damage, the storage bracket must be securely mounted to a surface capable of supporting the weight of the monitor and nozzle, including any shock loads that may result from rough roads. It is the responsibility of the installer to determine that the installation is capable of these loads.

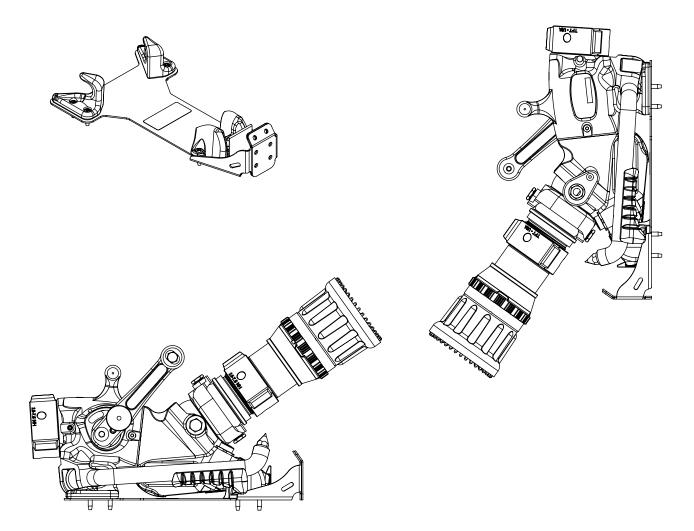

1

TASK FORCE TIPS LLC MADE IN USA · tft.com 3701 Innovation Way, Valparaiso, IN 46383-9327 USA 800-348-2686 · 219-462-6161 · Fax 219-464-7155

1.0 BRACKET INSTALLATION

Tools Required:

- Electric Drill
- · Drill Bits (see instruction for correct size)
- · #3 Phillips Screwdriver
- · 7/16" or Adjustable Wrench

The BlitzForce Portable Monitor storage bracket must be securely mounted to a surface capable of supporting the weight of the Monitor including any shock loads that may result from rough roads. The storage bracket may be mounted on a vertical surface or a horizontal surface with the nozzle end pointing down or sideways. It is the responsibility of the installer to determine if the installation is capable of these loads.

Blind Mounting may be used if the material beneath the BlitzForce Storage Bracket is thick and substantial enough for the self-tapping screws to be screwed directly into the mounting surface.

If the backside of the mounting surface is accessible, clearance holes may be drilled. Nuts and washers (not included) may be used to retain mounting screws.

It is the responsibility of the installer to determine if the mounting surface is satisfactory.

1.1 FOR BLIND MOUNTING

- Make sure the material beneath the bracket is substantial and thick enough to hold self-tapping screws as well as the weight of the BlitzForce and nozzle. A minimum thickness of 3/32" (.093" - 2.4 mm) in aluminum and 5/64" (.078" - 2 mm) in steel is recommended.
- 2. Lay the bracket in the area where the BlitzForce will be mounted. The end of the bracket with the three holes goes toward the BlitzForce outlet. Make sure there is enough clearance to get the BlitzForce in and out of the bracket and that it does not interfere with other equipment on the truck.
- 3. Make sure the area on the other side of the mounting surface is clear of wires or anything else that may be damaged if drilled into should the hole go through.
- 4. Use the chart to determine the correct hole size for the self-tapping screws.

ALUMINUM				STEEL			
Material Thickness	Inches	mm	Use Drill	Material Thickness	Inches	mm	Use Drill
5/64"	.206	5.2	#5	3/32"	.213	5.4	#3
1/8"	.213	5.4	#3	1/8"	.221	5.6	#2
3/16"	.221	5.6	#2	3/16"	.228	5.8	#1

Table 1.1
Hole Size for Self Tapping Screws

- 5. Using the bracket for a pattern, drill through the center hole in front of the bracket and into the mounting surface. Align the Latch and Front Bracket as shown and install one screw to secure.
- 6. While the first screw holds the bracket from moving, drill the remaining holes in the front and install the remaining screws.
- 7. Drill holes for the Left and Right Leg Brackets and secure with screws.

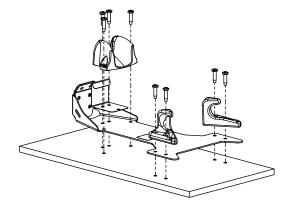


Figure 1.1

1.2 FOR MOUNTING WHERE THE BACK OF THE MOUNTING SURFACE IS ACCESSIBLE

- 1. Make sure the material beneath the bracket is substantial enough to hold the weight of the BlitzForce and nozzle.
- 2. Lay the bracket in the area where the BlitzForce will be mounted. The end of the bracket with the three holes in it goes toward the BlitzForce outlet. Make sure there is enough clearance to get the BlitzForce in and out of the bracket and that it does not interfere with other equipment on the truck.
- 3. Make sure the area on the other side of the mounting surface is clear of wires or anything else that may be damaged if drilled into.
- 4. Using the bracket for a pattern, drill through the center hole in front of the bracket and into the mounting surface. Align the Latch and Front Bracket as shown and install one screw to secure. Bolt the bracket to the mounting surface. Install washers and nuts (not included) on the backside.
- 5. While the first screw holds the bracket from moving, drill the remaining holes in the front and install the remaining screws. Secure with washers and nuts.
- 6. Drill holes for the Left and Right Leg Brackets and secure with screws. Secure with washers and nuts.

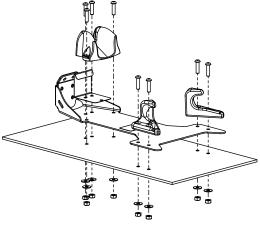


Figure 1.2

2.0 STORING THE MONITOR IN THE BRACKET

To store the monitor in the bracket, slide the monitor into the bracket outlet end first, until the folded legs are captured in the leg brackets and the latch is engaged with the carry handle.

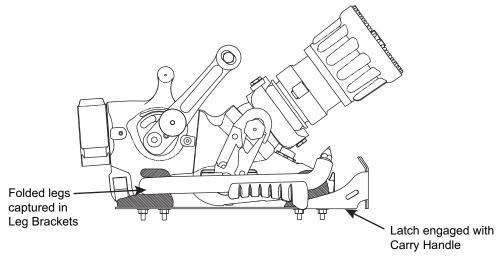


Figure 2.0

3.0 WARRANTY

Go to tft.com for all warranty information.

3701 Innovation Way, Valparaiso, IN 46383-9327 USA 800-348-2686 · 219-462-6161 · Fax 219-464-7155