



## TACTILE INDICATOR INSTALLATION WORKING FIRE™ NOZZLE

The Working Fire nozzle is equipped with a field replaceable Tactile Indicator to allow easy color coding to pump panel controls, and for maintenance of the stream shaper.

Required Parts:

- Tactile Indicator
- 10-32 Screw
- Indicator Label
- Loctite 271 threadlocker

To install the Tactile Indicator:



**STEP 1** - Remove the label from the Tactile Indicator, then remove the screw using a 5/32" hex key.



**STEP 2** - Lift the rear edge of the indicator tab so it hinges upward.



**STEP 3** - Pull the indicator outward to unwrap it from the Stream Shaper. Complete maintenance if needed.



**STEP 4** - Move the shaper into the STRAIGHT STREAM position. Wrap the new tactile Indicator around the Stream Shaper with the tab on top. The 3 tabs on the inside of the indicator will snap into the 3 grooves around the shaper. Close the tab to align the hole in the indicator tab with the threaded hole on the top of the Stream Shaper.



**STEP 5** - Apply Loctite 271 sparingly to the screw threads and install until snug using a 5/32" hex key.



**STEP 6** - Clean the surface where the label was removed in Step 1 using acetone, then install the new label.

**TASK FORCE TIPS LLC**  
MADE IN USA • TFT.com

3701 Innovation Way, Valparaiso, IN 46383-9327 USA  
800-348-2686 • 219-462-6161 • Fax 219-464-7155